12 VDC Bipolar/Unipolar Step Motor Actuator

SMA-12 (Item #953276)




INSTRUCTIONS

- Connect any Sporlan bipolar step motor valve to the SMA-12 by matching wire color to terminal color, see Figure 1. For ESX connections, refer to Figure 2. Any 12 VDC bipolar/unipolar step motor may be tested with the SMA-12. Phase one leads should be connected to the black and white terminals, Phase two should be connected to the red and green terminals.
- Select a step rate with the selector knob.
 ESX should use the 1 or 50 step rate, all other valves may use any rate.
- Push the open/close toggle in the close direction to extend the driver or close the valve.
- Push the open/close toggle in the open direction to retract the driver or open the valve.
- Observe terminal indicator lights. At rates other than 1, indicator lights will flash quickly. Pushing the open/close toggle in either direction at the 1 step rate will alternate the phases energized.

The following sequence of indicator lights will light.

	ı	BLACK	GREEN	RED	WHITE	4	L
		ON		ON			,
		ON	ON				OPEN
			ON		ON		
١	7			ON	ON		

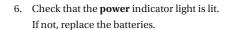


- If the terminal indicator lights do not light, one or both motor phases are open and the motor must be replaced.
- If the motor can be powered smoothly in both directions the motor assembly is functional and the controller must be tested or replaced.

SPECIFICATIONS


- Power input 2 Alkaline 9 volt batteries
- Power output 10 Watts intermittent
- Step rate Selectable 1, 50, 100, 200 steps per second
- · Drive type Bipolar, Unipolar
- Connector Binding post with banana plug socket

18" long pigtail connectors are available to allow the SMA-12 to directly connect to Sporlan valves.

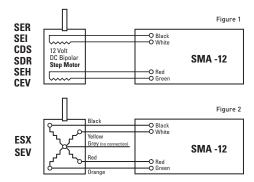





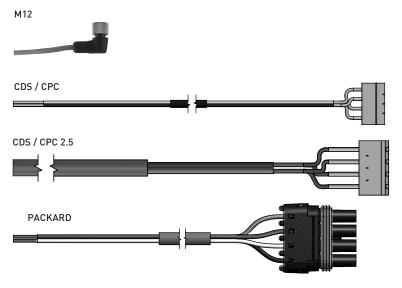

ITEM#	DESCRIPTION
805620	M-12 CONNECTOR
952919	CABLE ASSEMBLY - PIGTAIL - CDS/CPC PIGTAIL
953193	CABLE - PIGTAIL CDS/CPC 2.5MM
958112	PACKARD 18 IN

△WARNING – USER RESPONSIBILITY

Failure or improper selection or improper use of the products described herein or related items can cause death, personal injury and property damage.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product or system options for further investigation by users having technical expertise.

The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalog and in any other materials provided from Parker or its subsidiaries or authorized distributors.

To the extent that Parker or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the components or systems.

For safety information see the Safety Guide at www.parker.com/safety or call 1-800-CParker.

FOR USE ON AIR CONDITIONING and REFRIGERATION SYSTEMS ONLY

© 2018 Parker Hannifin Corporation

SD-213 / 92018



Parker Hannifin Corporation Sporlan Division

206 Lange Drive • Washington, MO 63090 USA

phone 636 239 1111 fax 636 239 9130 www.sporlanonline.com